

Big Time Deployment Entertainment System

Powerful, Compact Road Case Does It All!



When it comes to
MWR entertainment...
Bigger Is Better!

 
Celebrity's new outdoor
deployment bundle gives your
troops a really BIG show, be it
with the latest in Movies,
Music Videos, Karaoke, BIG-time
Gaming, TV-style Game Shows...
even TV or live a video feed!

Our all-in-one mobile turnkey system is built tough and
is ready to deploy in just minutes. Includes powerful and
bright cinema projector with TWO inflatable
screens (an 18' inflatable outdoor screen plus a
smaller indoor screen) and a powerful,
tripod-mounted dual-speaker sound system.

Cinema
screen
inflates and
deflates in
seconds!

**SETUP
AND
OPERATING
MANUAL**


Enjoy up to 8 BIG TIME entertainment sources!

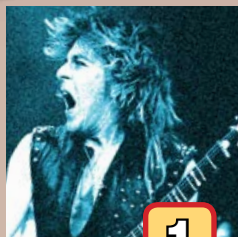

1

MUSIC VIDEOS

 Music Video System
with 8,000 Songs
Digital Music Videos
1-Yr. Subscription

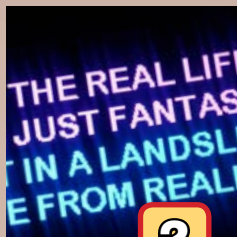

2

KARAOKE

Red Hot Touch
Karaoke System
10,000 Song Library
Digital Package



3

GAME SHOWS

Face-to-Face
Game Show Console
with Wireless Scoring
and Sound FX



4

MOVIES

Cinema for Land or Sea
Movie System with
8' and 18'
inflatable screens



5

GAMING

Xbox 360
and
PlayStation 4
(2 Controllers each)

6

Service-Provided DVD Player

Pre-integrated to allow for Service Player if available

7

8

Expansion

Add TV, live video or other sources!

CELEBRITY

Proudly
serving the
U.S. Military
since 1988

Celebrity Systems Corporation / A Vellicom Company
14 Monarch Bay Plaza, #435 Monarch Beach, California 92629
Sales 949-742-0454 / support@celebrityadmin.com / www.CelebrityNow.com
GSA: GS-07F-9998H | AFNAF: F41999-07-D-0656

Operating Manual for the BigTime Deployment Entertainment System™

Contents:

| | |
|---|----------|
| Index | Page 1 |
| System Visual Reference Guide | Page 2 |
| Setting Up | Page 3 |
| Event Location | Page 3 |
| Projection Screen | Page 3 |
| Speakers and Speaker Stands | Page 4 |
| Preparing Main Electronics Case | Page 4 |
| Setting up the Projector | Page 5 |
| Powering Up the System | Page 5 |
| Selecting Media Players (Sources) | Page 6 |
| Game Shows | Page 7 |
| Shutting Down the System | Page 8 |
| Karaoke eSongbooks | Page 8 |
| Remote Controls Reference | Page 9 |
| Service-Provided Media Player | Page 9 |
| Storage Drawers | Page 9 |
| System Configuration | Page 10 |
| Signal Path Diagram | Page 10 |
| Owner's Manuals | Page 11x |

NOTE:

***The specifications for
custom-configured
systems may vary.
Contact Celebrity for
assistance as needed.***

Online Support and Instructional Videos: www.celebritynow.com/support/bigtime

CELEBRITY

S e r v i n g P r o u d l y S i n c e 1 9 8 8

 
Celebrity Systems Corporation
A Vellicom company
14 Monarch Bay Plaza, #435
Monarch Beach, CA 92629
Sales and Support 949-742-0454
support@celebrityadmin.com
Visit us at www.celebritynow.com

Mobile Cases and Accessories:




Celebrity's BigTime Entertainment System™ is an all-in-one mobile system designed specifically for MWR deployment. It is capable of providing a full range of audio/visual entertainment, including:

- **Music Videos**
- **Karaoke**
- **Game Shows**
- **Movies**
- **Gaming**

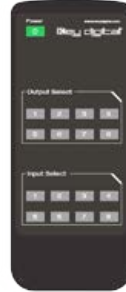

All electronics are integrated and controlled by a single remote controller. This Manual is designed to help you set up the basic system and understand how to control its various media sources, the projector and the sound system. Owner's manuals for specific components and accessories are also included at the rear of this Manual. Please refer to those manuals and documents as needed for additional information, operating instructions and troubleshooting tips.

 LOCATION, LOCATION, LOCATION: Selecting and organizing a proper location for your entertainment event is vital. It is important to arrange the key components in an optimum relationship in order to ensure the best performance and safety of your equipment, personnel and guests. The maximum distance from the electronics case to the projector and game show system is 25' using the cables provided. Speaker cables are 50' in length. *All venues are unique in some way, so use discretion in adjusting for your own circumstances and limitations.*

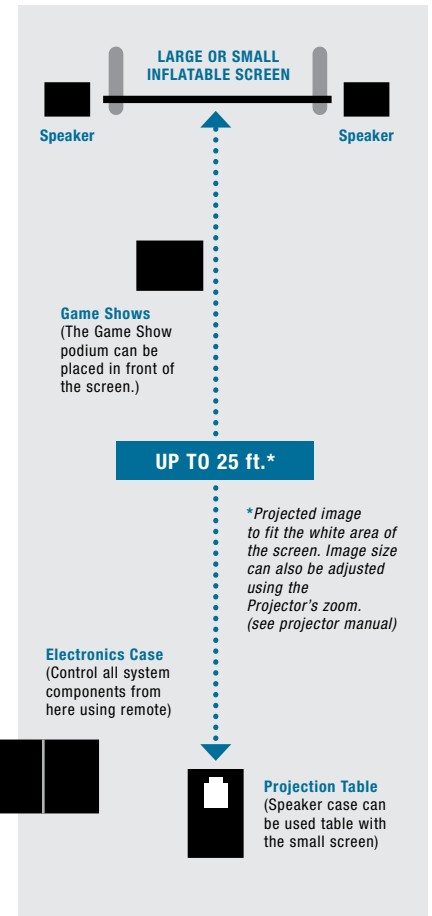

POSITION ALL MAJOR COMPONENTS BEFORE RUNNING CABLES AND POWER CORDS!

You are strongly advised to first place all of the system's major components (screen, speakers, projection table, game show podium and electronics case) into their final positions before running audio/video cables and power cords. For safety reasons secure all floor-running cables and cords with the included gaffer's tape.

1

POSITION THE PROJECTION SCREEN

This deployment entertainment system is designed to be used both indoors and outdoors. Two inflatable screens are provided. The large, 18 ft. screen (diagonal) is designed for outdoor use, although it can also be used indoors in rooms with a minimum ceiling height of 15 ft. The smaller screen can also be used outdoors, or indoors to a minimum ceiling height of 8 ft. Optionally, the small screen can be suspended from overhead beams, pipes or ceiling hooks without being inflated. This screen is also adaptable for rear-screen projection use. (Refer to screen's manual and Koala B-Air Blower owner's manual for features and instructions.)





2

SPEAKER SYSTEM AND HEAVY-DUTY STANDS



Gaffers Tape in lower compartment



Remove each of the two heavy-duty speaker stands from canvas carry bag and place each into final position on both sides of the screen. Remove speakers and speaker cables from their mobile case. Mount the speakers onto the speaker stands.

NOTE: BE CAREFUL when using the stand's strong internal air-powered elevation system, which literally raises the speaker for you! (Refer to the speaker stand owner's manual for complete instructions.)

The speakers connect to the back of the electronics case using two Neutrik connections for each speaker. Just insert the left and right speaker cables and twist to lock. Speaker cords are 50 ft. in length.

Speaker volume and other audio features are controlled by the mixing amp in the main electronics case, or optionally from the mixer/amp's remote control. Refer to VocoPro KR-3808 Pro owner's manual for instructions.

3

REMOVE COVERS AND PREPARE THE MAIN ELECTRONICS CASE



Release case latches, removing and setting aside the top, rear and front covers of the main electronics case. CAUTION: Two touch screens are mounted directly under case cover. **REMOVE WITH CARE!**

NOTE: Only the Game Show component requires minor setup. Remove laptop from under the upper right screen (remove bubble wrap and keep for storage). Pull out sliding shelf, position laptop as shown above. You will then need to connect the power and HDMI cables to the appropriate side ports of the laptop. Restore laptop after use.




4

SETTING UP THE PROJECTOR

Remove the projector and power cord from the right bottom drawer, and remove 25' HDMI cable and 25' extension power cord from left drawer. Place projector on a stable projection table, in position and read to use. Refer to InFocus IN3138HD owner's manual for details.

NOTE: The Speaker Case, with locking wheels, may be used as a projection table when using the small screen, however a taller projection table should be improvised when using the large inflatable screen)

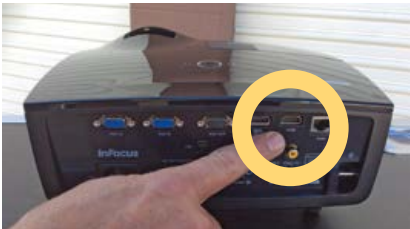

Connect HDMI cable from rear of electronics case to HDMI port on the rear of the projector.

One extra bulb is also included in the left storage drawer.



5

CONNECT SYSTEM POWER CORD AND POWERING UP THE SYSTEM

Connect the provided 25' extension cord to your main power source. **Be sure to use gaffer's tape to secure all cords to the floor, preventing accidental tripping and/or untimely power failures!**

Turn on both power conditioners on front of main electronics case. Both power conditioners must be used to support all of the system's electronics.

You are ALMOST ready to use your new entertainment system...





ALERT

IMPORTANT!

**This is your MASTER remote control.
DO NOT LOSE IT!!**

All of the media players are managed by this simple remote control.

This controller is the **ONLY** way that you can select the entertainment sources integrated with your system. It controls the powerful HDMI Matrix Switcher that transfers the video and audio, from all integrated components, to the projection screen and sound system.

BE SURE TO ACCOUNT FOR THIS REMOTE AT ALL TIMES!

6

SOURCE SELECTION

Your BigTime Entertainment System features five pre-installed media sources. Use the following remote control index to select the system you want to use:

- 1 DVD OR MUSIC VIDEOS***
- 2 KARAOKE****
- 3 GAME SHOWS**
- 4 PLAYSTATION 4**
- 5 XBOX 360**
- 6 Service-provided DVD player** (as provided Navy, Air Force, etc.)
- 7 & 8 Open ports for other sources***** (i.e., TV or live video camera)

* 8,000 music videos. Music subscription renewable annually, including song updates.
Contact Celebrity for details on updating your music video library.


** 10,000 songs. Song updates available.
Contact Celebrity for details on updating your karaoke music library.

*** Two additional HDMI sources, #7 and #8, are available for other media input such as TV or a live video feed. The audio and video for new sources will need to be integrated onto the matrix switcher. *See Signal Path Diagram on page 10.*

OPERATING Your BigTime Entertainment System

OTHER IMPORTANT STUFF TO KNOW...

Okay, so you're just about ready to take your show on the road, or over the seven seas, but there are just a few other things you should be aware of to get the most from your BigTime Entertainment System.

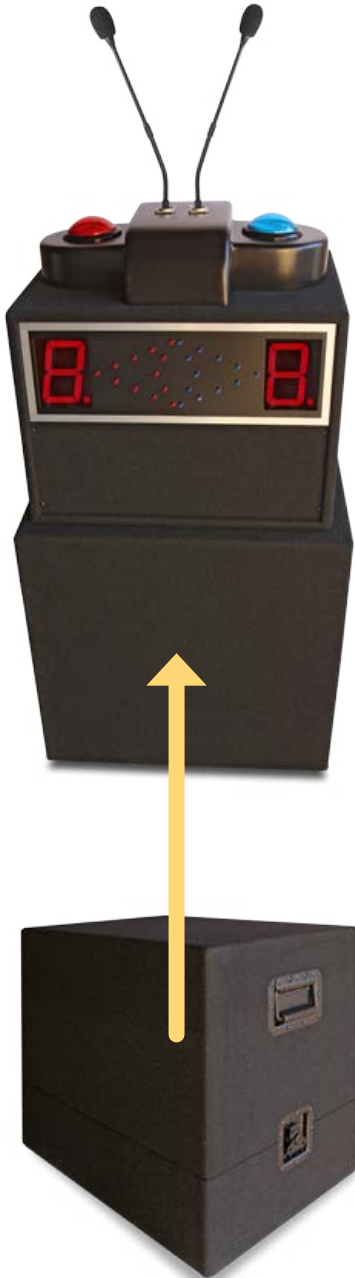

GAME SHOWS: The Game Show component is a TV-style game show system that lets two players or teams compete face-to-face. The players stand behind a podium that features an electronic lock-up mechanism showing the audience which contestant is the first to respond. The system provides built-in sound effects and score keeping with the big LED display on the front of the console. Also included are two goose-neck microphones so players' answers will be heard loud and clear through the BigTime's powerful speaker system.


The mobile case doubles as the podium for the Game Show console. Simply open case, remove the interior electronics unit, close the case again and place it into position as the podium. Then place the electronics unit on top to complete assembly of the competition console.

NOTE: Do not place the players' console directly in front of either speaker as this will result in disturbing "feedback" from the speaker into the microphones.

Next, connect each of the two included goose-neck microphones into the top of the system, then plug the power cord from the back of the player unit into any power source.

The final step in activating your game show system is to connect the 25' RCA audio cable (provided) from the AUDIO OUT, on the back of the game show electronics unit, to the AUX INPUT on the front of the mixer/amp.

A remote controller is provided which allows the game host or DJ to completely operate the game show system. *See Game Show owner's manual for operating instructions.*

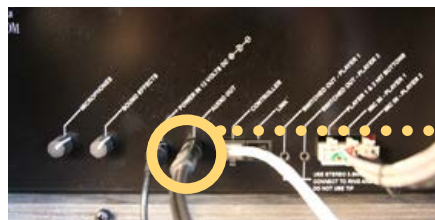

Audio Out on back of
Game Show electronics unit



Mixer/Amp on front of main electronics case

SHUTTING DOWN YOUR ENTERTAINMENT SYSTEM:

THIS IS IMPORTANT! Celebrity's BigTime Entertainment System is a smartly integrated system that efficiently manages multiple electronics components. In order to ensure that your system operates without issues, there are two components that must be turned off **BEFORE** closing down your system after each use — *BEFORE shutting off the two power conditioners on the front of the main electronics unit.*

1) Turn OFF the Karaoke Touch Screen ("Shuttle")


This button is located on the side of the upper-right corner of the screen.

2) Turn OFF the Music Video Computer ("Dell/ScreenCast")

This button is located on the front of the drive.

Once these two units are turned off, you may complete the shutting down of the system by turning off the two power conditioners ("Furman" or "ETA").

Karaoke Touch Screen
"Shuttle"

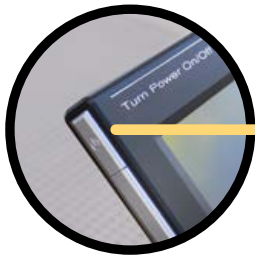


Music Video Computer
("Dell/ScreenCast")



KARAOKE SONG TABLETS: To boot up your karaoke eSongbooks, be sure to ***press and hold*** the power button on the tablet until the screen comes on.

NOTE: And remember also to turn your tablets OFF when the show is over!

OPERATING Your BigTime Entertainment System

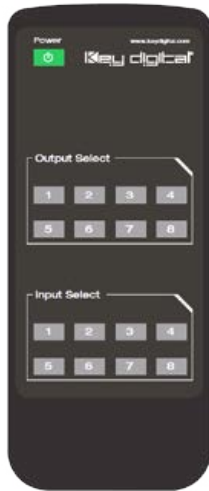

MASTER REMOTE
(control all media sources)

REMOTE CONTROLS: As you have already learned, the MASTER remote control (Gefen) is the one that controls all of the media players through the HDMI Matrix Switcher. **DO NOT LOSE OR MISPLACE THE MASTER REMOTE!**

There are additional remote controls, associated with specific components, that you will find helpful in operating and tweaking your system:



**InFocus
IN3138HD
Projector**



**VocoPro
KR-3808 Pro
Mixer/Amp**



**Game Show
Face-Off**



SERVICE-PROVIDED MEDIA PLAYER: An open shelf is provided for the purpose of integrating a service-provided DVD or other media player. This compartment is already wired to the Matrix Switcher as button #6. Simply install the player on to the shelf (secure properly with velcro or other means), and attach the provided HDMI cable (exposed located on the shelf).




Left Accessories Drawyer


STORAGE/ACCESSORIES DRAWERS: The main electronics case has two latching storage drawers at the bottom of the case. The right drawer is to store the projector; the left drawer contains this complete Setup and Operating Manual, game controllers, cables, extra projector bulb and other misc. items.

OPERATING Your BigTime Entertainment System

SYSTEM CONFIRURATION:

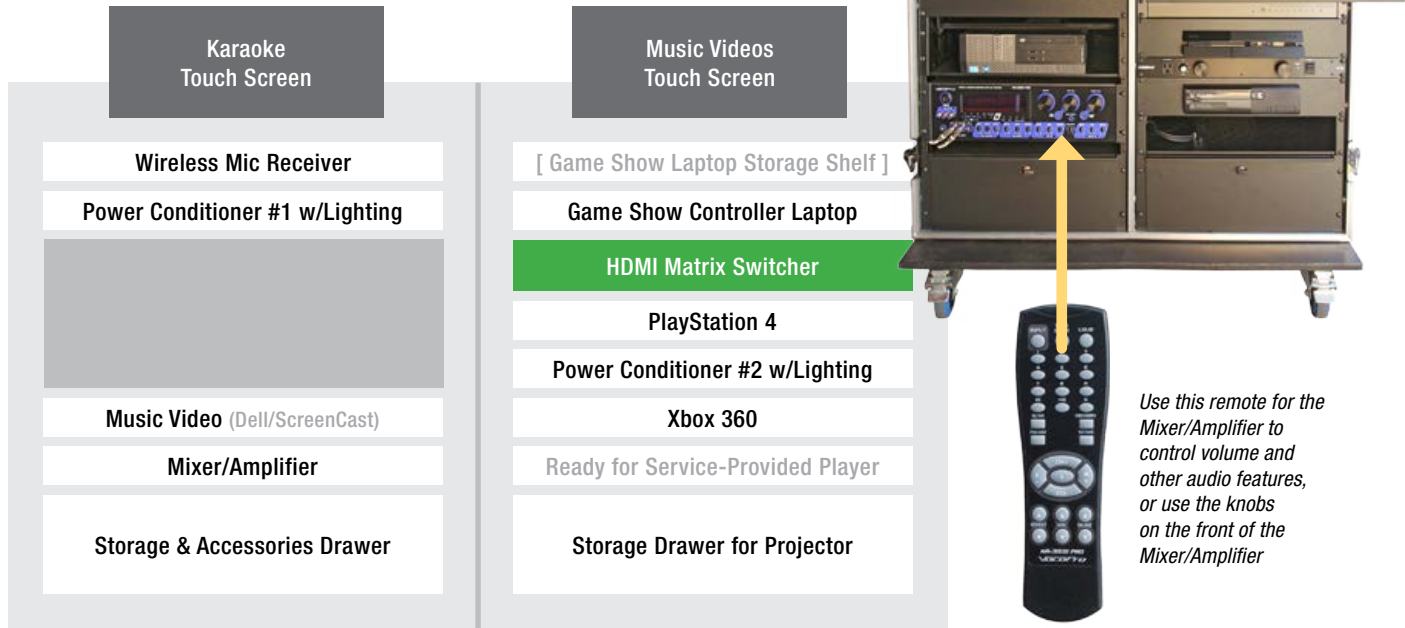

SIGNAL PATH DIAGRAM: The following wiring diagram is provided to assist you, as needed, in adding other input or output hardware to your system.

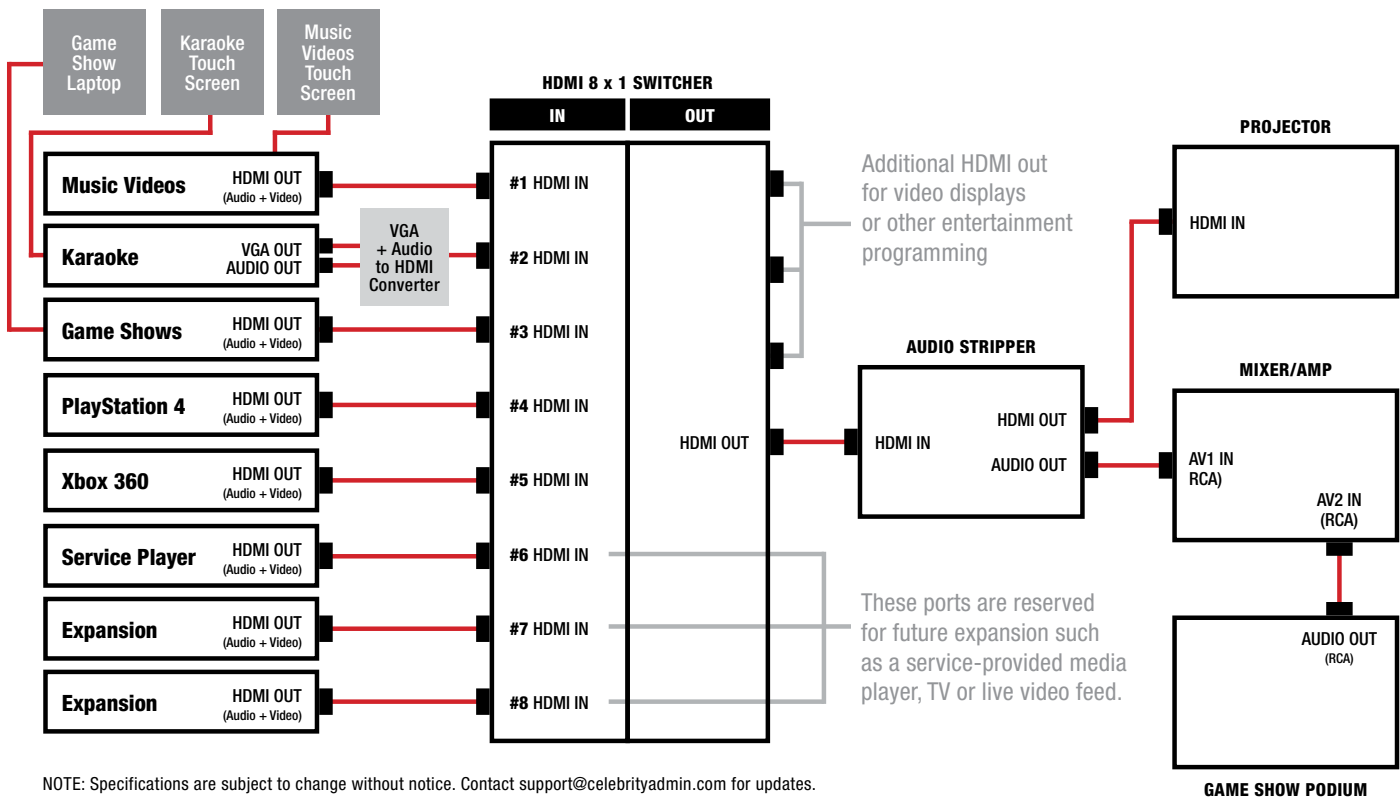

NOTE: Specifications are subject to change without notice. Contact support@celebrityadmin.com for updates.

Components Owner's Manuals

This section contains the manufacturers' Owner's Manuals for the various components that are integrated into this system.

Please refer to these manuals for basic operating instructions as needed.

For questions about the integration of this system, or for any other support, please contact Celebrity directly at:

support@celebrityadmin.com

Phone 949-742-0454

 
or view instructional videos at

www.celebritynow.com/support/bigtime

CELEBRITY

S e r v i n g p r o u d l y S i n c e 1 9 8 8

QUICK-REFERENCE SOURCE SELECTION:

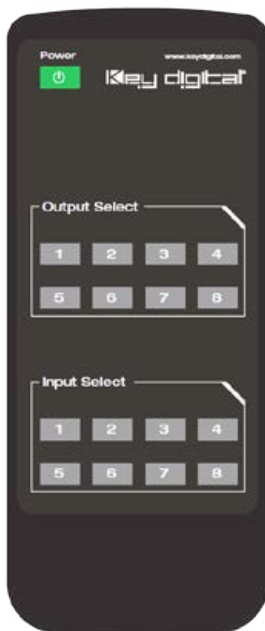

**DO NOT LOSE
THIS
MASTER
REMOTE
CONTROL!**

1 DVD/MUSIC VIDEOS

2 KARAOKE

3 GAME SHOWS

4 PLAYSTATION 4

5 XBOX 360

6 Service-provided DVD player
(as provided Navy, Air Force, etc.)

7 & 8 Open ports for other sources
(i.e., TV or live video camera)